
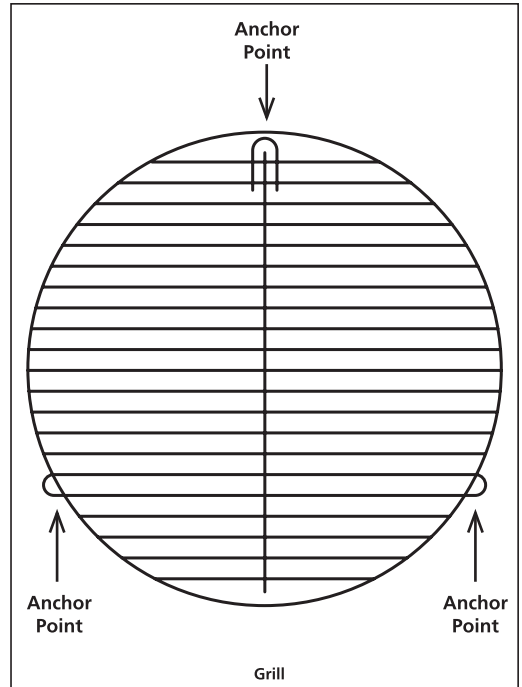


COGHLANS®

Tri-Pod Grill Assembly Instructions

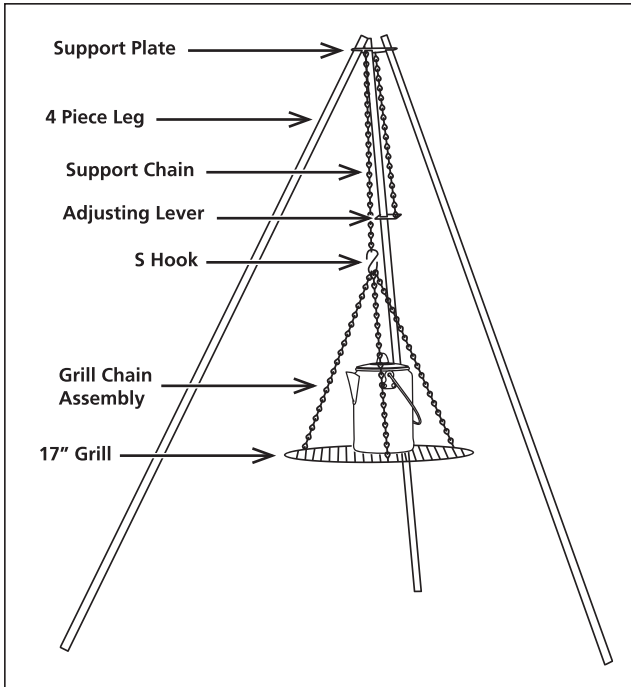

1. Assemble legs by sliding the tapered ends into the unformed ends. Legs are in four parts.
2. Slide the adjusting lever on top (tapered) end of leg.
3. Set up the tri-pod by inserting the legs into the holes in the triangular shaped support plate. The flat surface of the plate is at the top.
4. Feed the chain attached to the adjusting lever up through the guide hole in the support plate and then down through the opposing hole.
5. Set up the tri-pod over the fire pit, spreading the legs to create a solid base.
6. Attach support chains to anchor points on the grill. Use the S hook to attach the grill's support chain to the tri-pod.
7. By raising or lowering the adjusting lever, the grill height can be adjusted to vary cooking temperatures or for placing items on and off the grill surface.
8. The tri-pod can be used as a lantern hanger by removing the grill assembly and hanging a lantern by the bail handle.
9. The entire Tri-Pod Grill can be easily disassembled and re-stowed in the carton for convenient transportation and storage.